



**Tenergy Corporation**

436 Kato Terrace

Fremont, CA 94539 U.S.A



Tel: 510.687.0388 Fax: 510.687.0328

[www.TenergyBattery.com](http://www.TenergyBattery.com) email: sales@tenergybattery.com

<b>Product Name:</b>	LiFePO4 polymer lithium-ion rechargeable battery cell
<b>Product Number:</b>	30211
<b>Description:</b>	3.2V 200Ah LiFePO4 Rechargeable Battery
<b>Battery Chemistry:</b>	LiFePO4 (Lithium Iron Phosphate)

The document describes the product specification of the LiFePO4 polymer lithium-ion rechargeable battery cell supplied by Tenergy Corporation.

**Dimensions:**

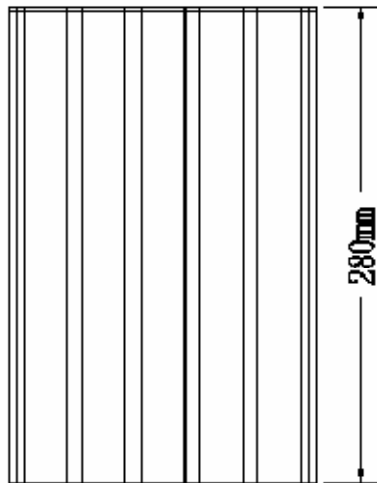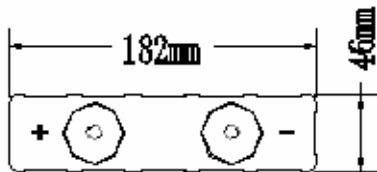

Item	Description	Dimensions
T	Thickness	82 mm max
W	Width	182 mm max
L	Length	280.0 mm max

**Tenergy Corporation**

436 Kato Terrace

Fremont, CA 94539 U.S.A

Tel: 510.687.0388 Fax: 510.687.0328

[www.TenergyBattery.com](http://www.TenergyBattery.com) email: sales@tenergybattery.com**Specifications**





Item	Specification
Typical capacity	200Ah@ 0.2C <sub>5</sub> A
Nominal voltage	3.2V
Internal impedance (Max, at 1000Hz.)	≤1mΩ
Charge cut-off voltage	3.65V
Charge current	Standard charge : 0.2C <sub>5</sub> A Rapid charge : 1C <sub>5</sub> A
Standard Charging method	0.3C <sub>5</sub> A constant current(CC) charge to 3.65V, then constant voltage 3.65V (CV) charge till charge current decline to≤0.02C <sub>5</sub> A
Charging time	Standard charge : 7.5h (reference) Rapid charge : 2.5h (reference)
Max. discharge current	2 C <sub>5</sub> A
Discharge cut-off voltage	2.0V
Operating temperature	Charge : 0°C ~ 45°C Discharge : -20°C ~ 60°C
Storage temperature	-20°C ~ 55°C
Storage humidity	< 85%
Cell Weight	Approx : 6.26kg

Specifications and data are subject to change without notice. Contact Tenergy for latest information.

©2009 Tenergy Corporation. All rights reserved.



### CHARACTERISTIC CURVES

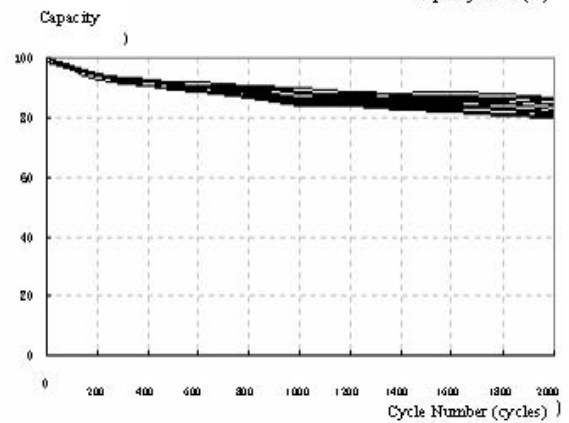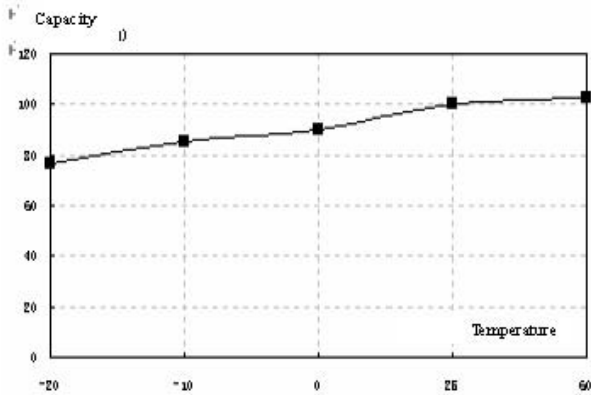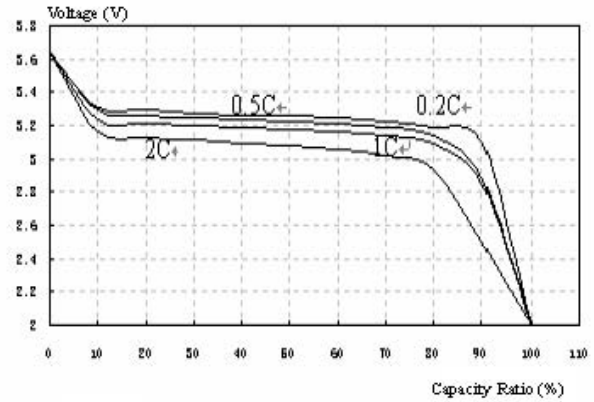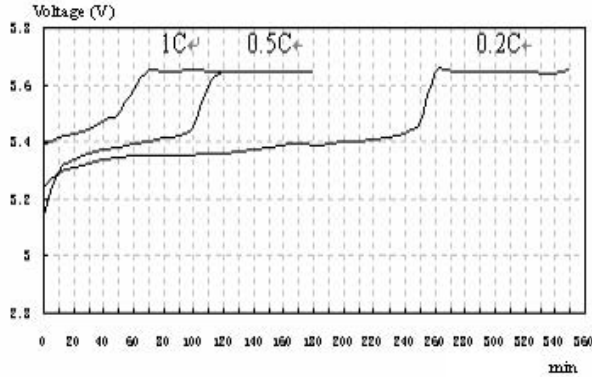

### INDICATIONS ON BATTERY PACK

The following warnings should be indicated on the battery packs

- Use a specified charger
- Do not throw the battery into fire or heat
- Do not short-circuit the battery terminals
- Do not disassemble the battery



---

## **WARNINGS AND CAUTIONS IN USING THE BATTERY**

To prevent a possibility of the battery from leaking, heating or explosion please observe the following precautions:

### **WARNINGS!**

- Do not immerse the battery in water or seawater, and keep the battery in a cool dry surrounding if it stands by.
- Do not use or leave the battery near a heat source as fire or heater.
- Use the battery charger specifically for that purpose when recharging.
- Do not reverse the position and negative terminals.
- Do not connect the battery to an electrical outlet.
- Do not discard the battery in fire or a heater.
- Do not short-circuit the battery by directly connecting the positive and negative terminals with metal objects.
- Do not transport or store the battery together with metal objects such as hairpins, necklaces, etc.
- Do not strike, trample or throw the battery.
- Do not directly solder the battery and pierce the battery with a nail or other sharp objects.

### **CAUTIONS!**

- Do not use or leave the battery at high temperature (for example, at strong direct sunlight or in a vehicle in extremely hot weather). Otherwise, it can overheat or fire or its performance will be degenerate and its service life will be decreased.
- Do not use the battery in a location where static electricity and magnetic field is great, otherwise, the safety devices may be damaged, causing hidden trouble of safety.
- If the battery leaks, and the electrolyte get into the eyes, do not rub the eyes, instead, rinse the eyes with clean water, and immediately seek medical attention. Otherwise, it may injure eyes.
- If the battery gives off an odor, generates heat, becomes discolored or deformed, or in any way appear abnormal during use, recharging or storage, immediately remove it from the device or battery charger and stop using it.
- In case the battery terminals are dirty, clean the terminals with a dry cloth before use. Otherwise performance may occur due to the poor connection with the instrument.
- Be aware discarded batteries may cause fire or explosion, tape the battery terminals to insulate them.